

Pos. Code Description

#1	500832	NARROW SHARE
15	403034	FLEXIBLE PLATE CAST IRON SHARE L=6
16	403038	INSERT L=6 FLEXIBLE PLATE TRIUM
17	402987	PLANT CONTROL TRIUM_LOWER PART
18	422280	NARROW SHARE TRIUM-BEST-TOP INS.L=8

#2	500833	STANDARD SHARE
15	403035	FLEXIBLE PLATE CAST IRON SHARE L=9
16	403039	INSERT L=9 FLEXIBLE PLATE TRIUM
17	402987	PLANT CONTROL TRIUM_LOWER PART
18	422281	STD SHARE TRIUM-BEST-TOP INS.L=14

#3	500834	MIDDLE SHARE
15	403036	FLEXIBLE PLATE CAST IRON SHARE L=20
16	403040	INSERT L=20 FLEXIBLE PLATE TRIUM
17	402987	PLANT CONTROL TRIUM_LOWER PART
18	422282	SHARE TRIUM-BEST-TOP INS.L=24

#4	500835	MEDIUM SHARE
15	403037	FLEXIBLE PLATE CAST IRON SHARE L=24
16	403041	INSERT L=24 FLEXIBLE PLATE TRIUM
17	402987	PLANT CONTROL TRIUM_LOWER PART
18	422283	MEDIUM SHARE TRIUM-BEST-TOP INS.L=33

#5	500836	LARGE SHARE
15	403037	FLEXIBLE PLATE CAST IRON SHARE L=24
16	403041	INSERT L=24 FLEXIBLE PLATE TRIUM
17	402988	PLANT CONTROL TRIUM_LOWER PART
18	422284	LARGE SHARE TRIUM-BEST-TOP INS.L=43

PLOUGHSHARE KIT

