


VOM-PIATTO FL-INS.

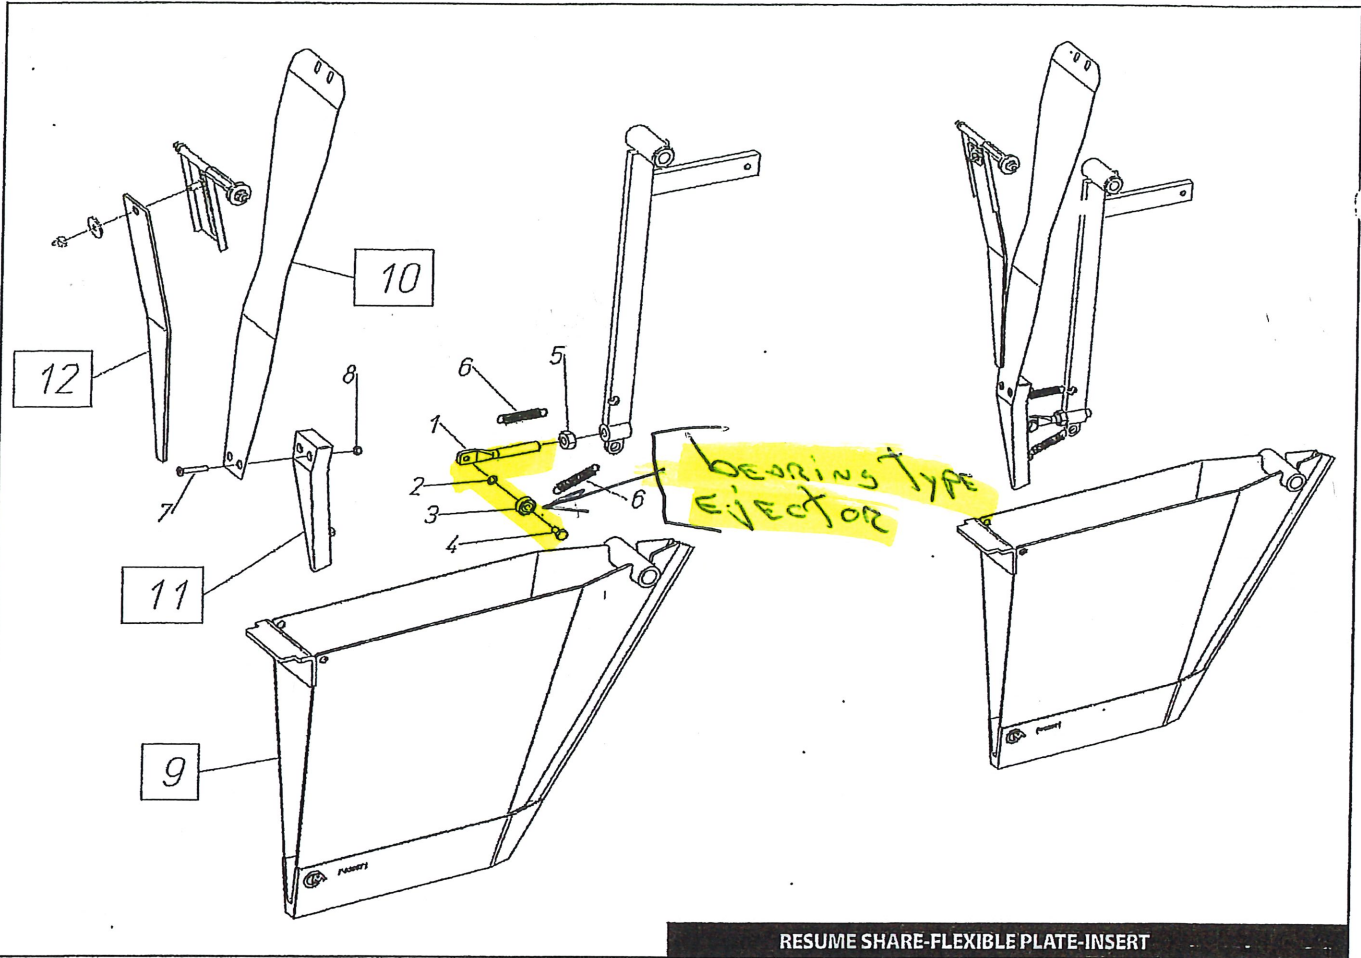

RESUME SHARE-FLEXIBLE PLATE-INSERT

Pos.	Code	Description
1	421765	SCREW FLEXIBLE PLATE WITH BEARING
2	907200	FLAT WASHER 6x10x1 ZB
3	910125	BEARING 2RS 626 (6-19-6)
4	902466	SCREW TE M 6x12 - 8.8
5	905106	NUT M 10 (MEDIUM) 6S
6	800042	TRACTION SPRING de 10 THREAD 1.3 L=40
7	904103	SCREW TSEI M 5x 30 UNI5933 10.9 ZG
8	906103	NUT ATB M 5 (LOW) UNI7474 6.8 ZG
NARROW SHARE		
9	421584	NARROW SHARE TRIUM-BEST-TOP INS.L=8
10	402647	FLEXIBLE PLATE CAST IRON SHARE L=6
11	402569	INSERT L=6 FLEXIBLE PLATE TRIUM NARROW SHARE
12	401426	PLANT CONTROL TRIUM_LOWER PART (STANDARD SHARE)
9	421601	STD SHARE TRIUM-BEST-TOP INS.L=14
10	402635	FLEXIBLE PLATE CAST IRON SHARE L=9
11	402570	INSERT L=9 FLEXIBLE PLATE TRIUM STANDARD SHARE
12	401426	PLANT CONTROL TRIUM_LOWER PART
MIDDLE SHARE		
9	421695	SHARE TRIUM-BEST-TOP INS.L=24
10	402648	FLEXIBLE PLATE CAST IRON SHARE L=20
11	402574	INSERT L=20 FLEXIBLE PLATE TRIUM MIDDLE SHARE
12	401426	PLANT CONTROL TRIUM_LOWER PART
MEDIUM SHARE		
9	420885	MEDIUM SHARE TRIUM-BEST-TOP INS.L=33
10	402649	FLEXIBLE PLATE CAST IRON SHARE L=24
11	402575	INSERT L=24 FLEXIBLE PLATE TRIUM MEDIUM SHARE
12	401426	PLANT CONTROL TRIUM_LOWER PART
12	401426	PLANT CONTROL TRIUM_LOWER PART
LARGE SHARE		
9	420896	LARGE SHARE TRIUM-BEST-TOP INS.L=43
10	402649	FLEXIBLE PLATE TRIUM L=26 MEDIUM SHARE
11	402575	INSERT L=26 FLEXIBLE PLATE TRIUM
12	401492	PLANT CONTROL_LOWER PART - LARGE SHARE