


When you have finished to work or during the day check always to have enough grease for the next day. Otherwise go to the greasing position with a manual pump and fill the proper tank.



ATTENTION!
Do not exaggerate with grease's quantity because the tank has got a spring that act as a plunger. If this spring is too compressed, it risks to break the top cap of the tank causing a leak of grease.

Check periodically the grease's lowering, in case it doesn't happens it is suggest to check the small wheels (A) that determine the quantity of grease to send to the support. These small wheels are mounted on spring and they adjust the quantity of grease that flow through the tube; sometimes vibrations or dust can compromise their functioning.

Before stocking up the machine it is suggested to dismantle and clean the small wheels in order to achieve the best result.

