



M40.0044

M40.0047

M40.0044

M40.0079 NBR dbl. lip 85x110x12 MSOT6009

TRAV 5

36

35

34

33

32

31

30

29

28

27

26

25

24

21

20

23

22

37

38

39

7

6

5

4

3

2

1

8

9

15

16

17

18

19

10

11

12

13

14

END DRIVE & JACKSHAFT

Line #	Part #	Description
1	T600120	Nut
5	T600121	Wear Sleeve
4	T600122	Seal, 63 x 90 x 10
	T600123	O-Ring
6	T6006	Bearing, 33211 <i>M40.0022</i>
	T600122	Seal, 63 x 90 x 10
8	T600117	Gasket
	?	Spacer
	See #6	Bearing, 33211 <i>M40.0022</i>
9	T6003	Jackshaft <i>M10.0124 - 600.00</i>
11	T6006	Bearing, 33211 <i>M40.0022</i>
<i>SO.0613.3x80</i>	12	T6001A Top Gear, 18T
<i>SO.0617.3x80</i>	21	T6001B Large Intermediate Gear, 48T <i>M10.0175</i>
<i>SO.0616.3x80</i>	18	T6001C Small Intermediate Gear, 27T <i>M10.0176</i>
	19	T6006 Bearing, 33211 <i>M40.0022</i>
	16	T600108 Hub <i>M10.0170</i>
	15	T600109 Gasket
	26	T6001D Bottom Gear, 32T
	37	T60010 Gasket → <i>SO 0619 3x80</i>
Not Shown	T6001	Gear Set (Incl. # 14, 18, 19 & 25)
29	<i>M40.0007</i>	<i>Bearing 22312EJW33</i>
10	<i>M40.0160</i>	<i>Bushing</i>
17	<i>M40.0022</i>	<i>SKF Bearing, 33211</i>
24	<i>M40.0044</i>	<i>Special nut</i>
25	<i>NO CODE</i>	
31	<i>M40.0079</i>	<i>Spacer ring</i>