


REPAIR PARTS

Item	Description	Part Number
1 (10 to 10	Draw hook	0E-20
,	Draw hook clevis	R-666
	Standard, right, two-hole	PB-26A
<u> </u>	Complete tilting bar, right	R-600-R
5	Angle brace	. R-600
6 .	Bottom clip	R-777
7	Short channel	R-47
.8	Standard, center, front left,	•
	two small holes	R-8
9 ,	Standard, center rear, left,	R-24
	one-hole	
10	Quandrant	R-9
11	Complete lever assembly	R-38-A
	Lever	P-45
12 13	Bolt, plunger to lever	P-37
14	Plunger, lever	P-41A
15	Spring, lever	P-44 .
16	Center tilting bar link	R-5
17	Complete tilting bar, left	R-600-L
18	Standard, left, two-hole	. PB24A
19	Tilting bar only	R-602
20	Rivet, shouldered, short	P-46

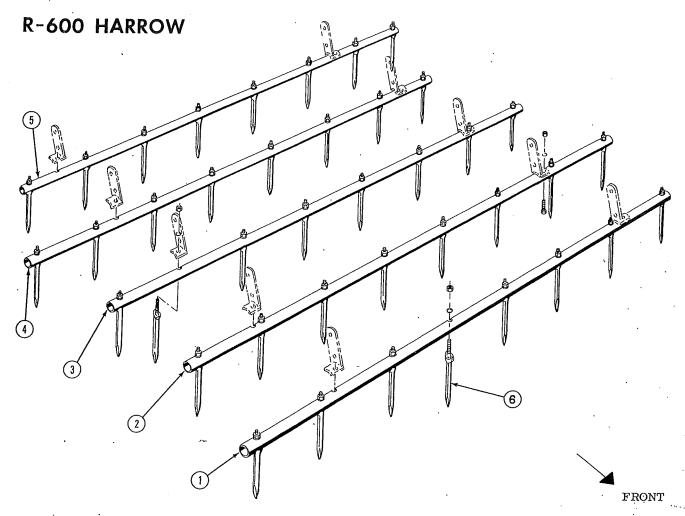

REPAIR PARTS

Item	Description	Part Number
1	Pipe bar, front, drilled, painted,	,
2 .	less teeth Pipe bar, second, drilled, painted,	R600-1
3	less teeth Pipe bar, center, drilled, painted,	R600-2
	less teeth	R600-3
5	Pipe bar, fourth, drilled, painted, less teeth Pipe bar, rear, drilled, painted,	R600-4
6	less teeth Tooth, shouldered, 1 7/8" shank	R600-5 FP95-3D
**	ASSEMBLY INSTRUCTIONS	332 - 119

Open the bundle and remove the bolt (A) from the center rear standard on the lever. Rotate the rear pipe bar to operating position, and secure in position with the same bolt. MAKE SURE ALL CAP SCREWS, LOCK WASHERS AND NUTS ARE TIGHT!