

SUPER SLIDE

OPERATOR'S MANUAL

MODEL SB - 22 & SB - 25

SAFETY INSTRUCTIONS

- Make sure all pins are secure and locked in the 3-point before putting machine in operation.
- DO NOT sit on weight box lid or any part of unit.
- DO NOT drive post with three point raised.
- DO NOT wear loose clothing while operating machine.
- Shut off tractor and set brakes before leaving tractor seat.
- Keep spectators clear of implement when in operation.
- DO NOT move tractor while driving posts.
- Wear safety goggles while operating driver.
- Stay completely away from all moving parts while unit is operating.



SHAVER MANUFACTURING CO. GRAETTINGER, IOWA • (712) 859-3293



THE PACKING LIST

Your Super Slide will consist of 3 parts. (See illustration on page 3.)

- 1. Hydraulic Tool Bar and components.
- 2. Short Channel
- 3. Misc. Carton

MOUNTING & ASSEMBLY INSTRUCTIONS


- 1. Position tractor in front of Super Slide.
- 2. Attach lower arms to the 3-point bracket.
- 3. Attach third 3-pt. arm to 3-point bracket.

 Adjust to make the Super Slide perpendicular to the ground level.
- 4. Mount base plate of the post driver on the Turn Table.

 Make sure all 4 Turn Table bolts are secured tightly.
- 5. Mount Short Channel on post driver. (See post driver operator's manual.)
- 6. Mount post driver on base plate. (See post driver operator's manual.)
- 7. Mount the valve (GS-V20-4695) on the Short Channel (SB-9129). See instructions on adding spools to existing valves.
- 8. Connect the 2) SM-0002-P Hoses (48" length) from the 4th spool of the 5-spool valve to the Turn Table Cylinder (OS-1-348).
- 9. Connect the SM-0003-P and the SM-0004-P Hoses from inside the hydraulic tool bar to the 5th spool of the 5-spool valve. (The 5th spool contains no restrictors.)
- 10. Remove the Hair Pin Clip from the swivel table. Mount the Turn Table Cylinder and re-attach Clip.

OPERATING INSTRUCTIONS

- 1. Set brake or use park position on tractor.
- 2. Lower Super Slide legs to the ground.
- 3. Super Slide is now ready to be extended or rotated to any position the operator requires.
- 4. Use 4th handle of the 5-spool valve to control circular positioning of the post driver.
- 5. Use the 5th handle of the 5-spool valve to extend the post driver horizontally.

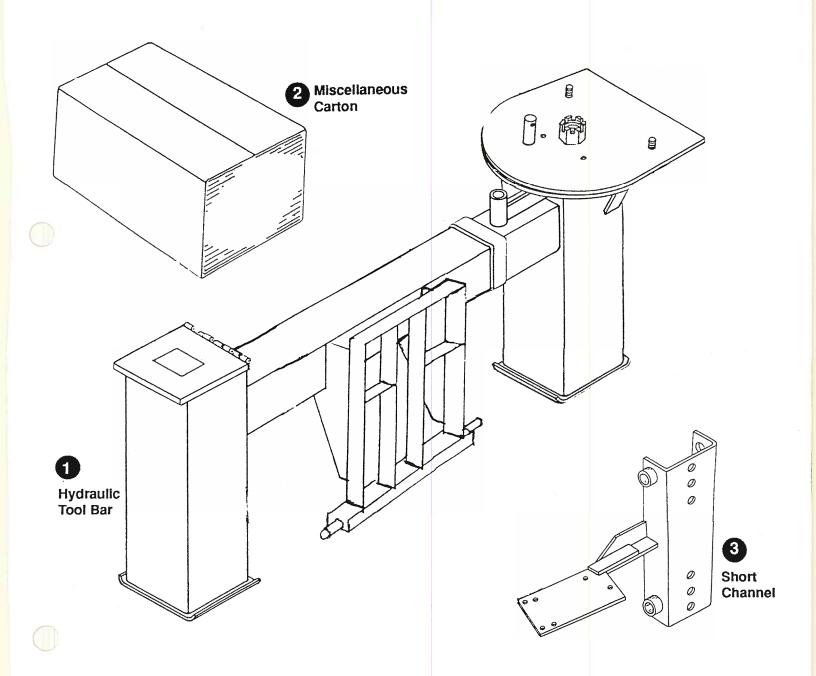

PARTS LIST

SHAVER SUPER-SLIDE PARTS LIST

1. SB-2516 Weight Box Lid Complete 2. MS-177 Weight Box Safety Decal Weight Box Cylinder Pin 3. SB-25325 Short Channel 4. SB-9129 (illus. on page 3) 5. SB-25324 Slide Cylinder Pin Top Plate 6. SB-2521 7. SB-2524 Turn Table Nut Turn Table Washer 8. SB-2525 9. SB-2523 Roll Pin Piston Rod 10. SB-2531 11. SB-2532 Cylinder Tube Complete Slide Cylinder Complete 12. SB-253 13. GS-4695 Valve for SB-25 (Not Shown) Valve w/ Stud Kit for SB-22 14. GS-7662A (Not Shown) 15. OS-1-348 Turn Table Cylinder Complete


1/4" x 8' Hose Assy. (Not Shown)

1/4" x 10' Hose Assy.

Slide Safety Decal

(Not Shown)

Grease Zerk

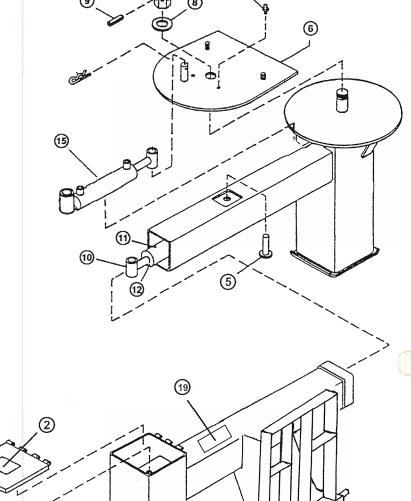

(18)

SHAVER MANUFACTURING CO. GRAETTINGER, IOWA 51342

© OCT. 2003

16. SM-0003-P

17. SM-0004-P

18. SM-1251

19. MS-176

PARTS LIST

SHAVER SUPER-SLIDE PARTS LIST Weight Box Lid Complete 1. SB-2516 **6**) Weight Box Safety Decal 2. MS-177 Weight Box Cylinder Pin 3, SB-25325 Short Channel 4. SB-9129 (illus. on page 3) Slide Cylinder Pin 5. SB-25324 Top Plate 6. SB-2521 Turn Table Nut 7. SB-2524 Turn Table Washer 8. SB-2525 9. SB-2523 **Boll Pin** Piston Rod 10. SB-2531 ~ Cylinder Tube Complete 11. SB-2532 Slide Cylinder Complete 12. SB-253 Valve for SB-25 (Not Shown) 13. GS-4695 Valve w/ Stud Kit for SB-22 14. GS-7662A (Not Shown) Turn Table Cylinder Complete 15. OS-1-348 (19) 1/4" x 8' Hose Assy. 16. SM-0003-P (Not Shown) 2 1/4" x 10' Hose Assy. 17. SM-0004-P (Not Shown) Grease Zerk 18. SM-1251

SHAVER MANUFACTURING CO. GRAETTINGER, IOWA 51342

Slide Safety Decal

© OCT. 2003

19. MS-176

