

MASTER LANDWHEEL TYRES

Check that tyres have the correct pressure - 1.5 bar (22 p.s.i.)

METERING UNITS

Check that the correct belts, base, and chokes are fitted for the seed type and spacing required. (See seed belt, spring base and choke selection chart - Section 5). Ensure they are all fitted correctly as per the instructions on Metering Unit - Section 2.

DRIVE SETTING

MASTER LANDWHEEL DRIVE

